


SV-2150W-RM Installation


Date: April 16, 2013

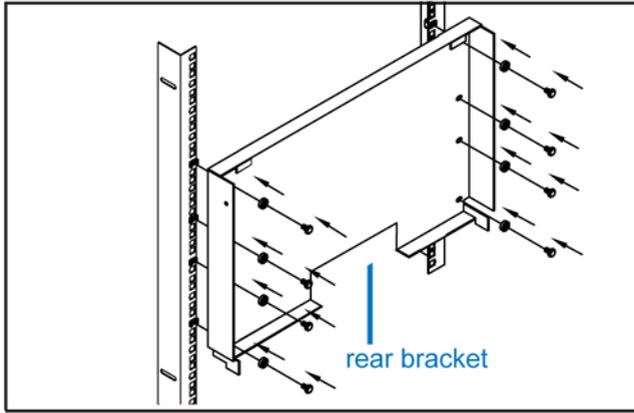

Step 1


Mount the rear bracket with M6 screw set.

8 x M6 screw set are required.

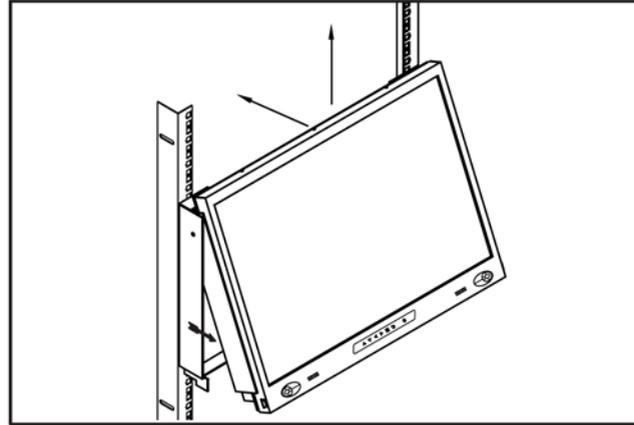


Step 2

Insert the upper part of the SV-2150W-RM display panel into the rear bracket.

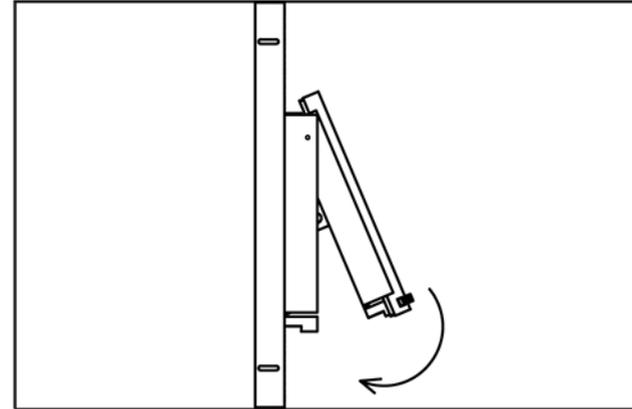

Step 3

Push the lower part of the SV-2150W-RM display panel into the rear bracket.

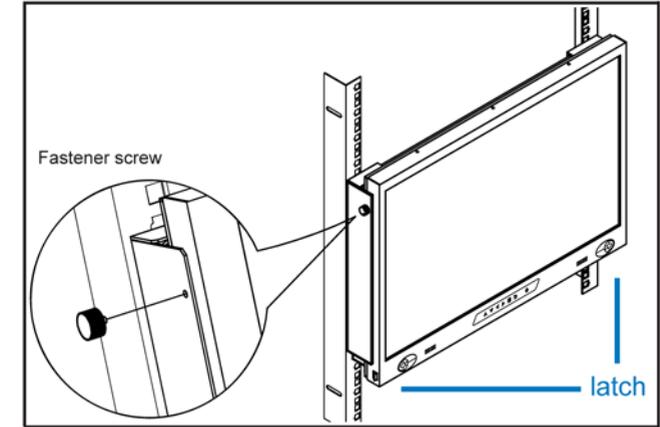

Step 4

Fix the SV-2150W-RM display panel into the rear bracket with two fasteners (Left & right side).

Lock the SV-2150W-RM display panel by the latch (on the bottom left & right side).